

## Haval H6 Service Schedule



Both distance travelled and times are shown. It is important to service your vehicle at whichever interval occurs first.

Months or Mileage *1000 km	12 10	24 25	36 40	48 55	60 70	72 85	84 100	96 115	108 130	120 145
Engine oil	R	R	R	R	R	R	R	R	R	R
Engine oil drain plug washer	R	R	R	R	R	R	R	R	R	R
Engine oil filter	R	R	R	R	R	R	R	R	R	R
Throttle valve		C		C		C		C		C
Inside intercooler hoses		C		C		C		C		C
Spark plug			R			R			R	
Generator / water pump belt	Replace every 100,000 km									
Auto transmission fluid (ATF)	Replace every 48 months or 70,000 km (filter element and housing replaced simultaneously)									
Transfer case oil (4wd only)	First replace at 36 months or 40,000 km, then replace every 36 months or 85,000 km									
Rear differential gear oil (4wd only)	First replace at 36 months or 40,000 km, then replace every 36 months or 85,000 km									
Lubricants of torque transfer device (4wd only)	Replace every 55,000 km									
Tension of important fasteners	I	I	I	I	I	I	I	I	I	I
Disc brake front and rear	I	I	I	I	I	I	I	I	I	I
Tyre pressure and wear	I	I	I	I	I	I	I	I	I	I
Ball joint and dust cover	I	I	I	I	I	I	I	I	I	I
Air cleaner element	C	R	C	R	C	R	C	R	C	R
Air conditioner filter element		R		R		R		R		R
Canister filter cleaning			C			C			C	
Engine coolant				R				R		
Brake fluid			R			R			R	
Radiator (appearance)	I	I	I	I	I	I	I	I	I	I
Intercooler (appearance)	I	I	I	I	I	I	I	I	I	I
Battery	I	I	I	I	I	I	I	I	I	I
Sunroof	I	I	I	I	I	I	I	I	I	I
Sunroof drain	I	I	I	I	I	I	I	I	I	I
Sign of oils / fluid leakage	I	I	I	I	I	I	I	I	I	I
Lights and warning device operation	I	I	I	I	I	I	I	I	I	I
Parking brake operation	I	I	I	I	I	I	I	I	I	I
Recall / Service Campaign check	I	I	I	I	I	I	I	I	I	I
Road test quality control	I	I	I	I	I	I	I	I	I	I

R = Replace , I = Inspect , C = Clean

**FIND A DEALER**